

Change the red bar



Spring box before



Slide the 2 pins back – remove the red bar



Red bar with the spring



Place your finger along the bar



Place the spring inside the box



Turn the red bar around the axel and push down



Push the 2 pins up.

Important : when you introduce the red bar at 45° look at the positioning of the spring and then turn it around the axle and push back into the spring box. Push the side of the red bar completely into the spring box.